

SASH WINDOW BOLT


CONTENTS




TOOLS REQUIRED

- Bradawl Or 2.5mm drill bit
- Posidriv (Phillips) screwdriver
- Pencil


NOTE: If fitting to hardwood drill 2.5mm pilot holes.

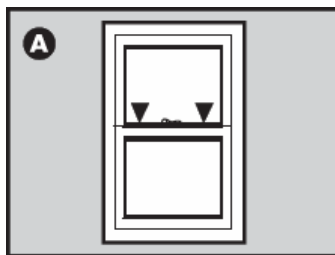

- A.** Close window and select position of lock.

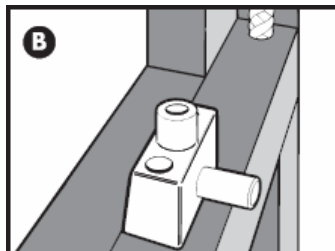

- B.** Locate lock mechanism on lower sash ensuring base of lock mechanism is flush with edge of frame. Mark screw holes and screw lock mechanism to frame.

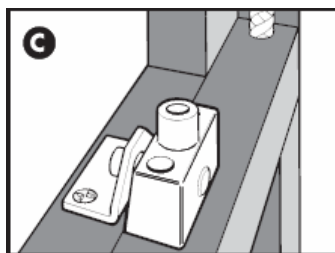

- C.** Position receiving plate on upper sash ensuring bolt passes centrally through receiving plate. Set receiving plate slightly back from edge of frame to ensure window can pass. Mark screw holes and secure receiving plate with security screws supplied.

Note: Security screws cannot be removed without drilling.

Security Tips: We recommend fitting 2 sash bolts position 150mm from each side of the window.